


MANCHESTER VINYL PICKET FENCE KIT 2-PACK (42"H X 92"W)

ASSEMBLY INSTRUCTIONS ZP19018

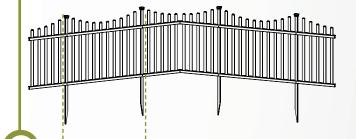

60 MIN


Approximate assembly time for two fence panels

Want to see a video on how to assemble this product?

Scan the OR code







GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

- parts.nychbrands.com
- **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from **9am- 5pm EST**. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19018** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number inside the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, so please give us a call at 704-892-5222 / 877-234-6196.


NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to initiate the return from the company you originally purchased from.


Detailed Product Dimensions & Specifications

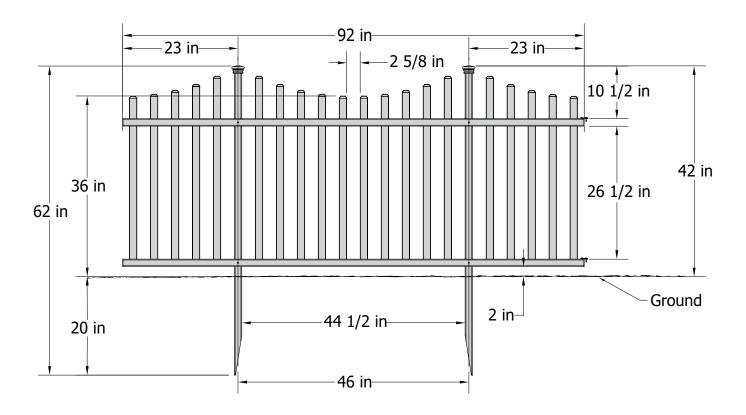

STEP 1: LAY OUT MATERIALS

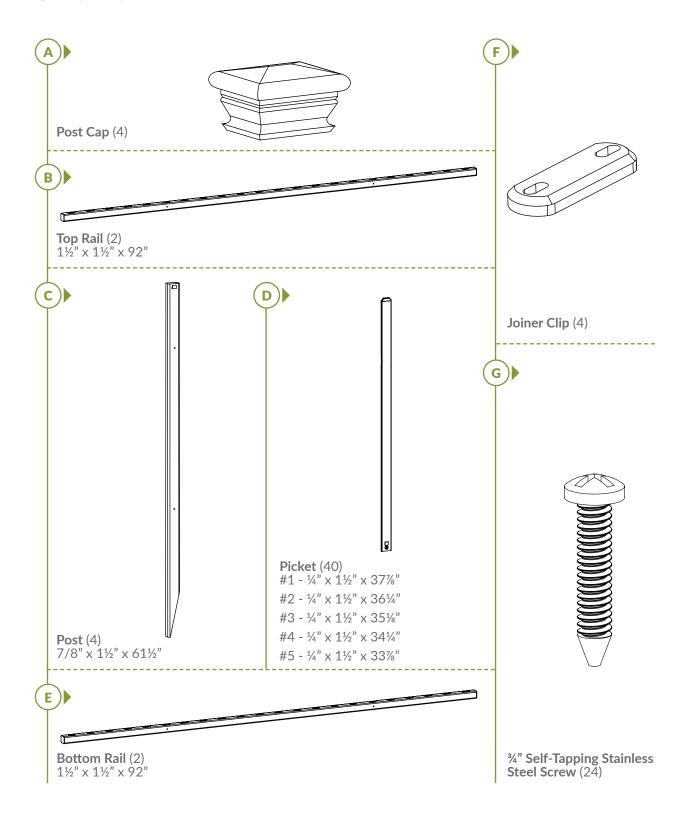


STEP 2: ASSEMBLE THE FENCE FRAME

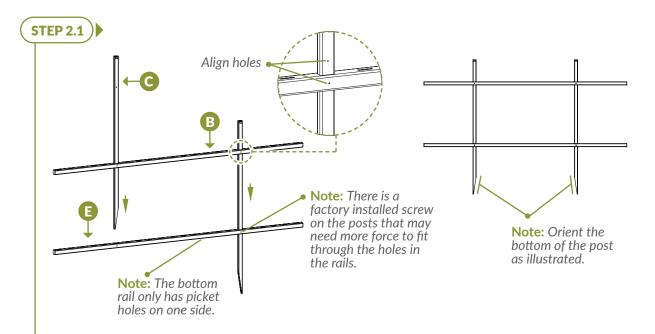

▶ Position the Top Rail (B) and the Bottom Rail (E) as illustrated, and slide the two Posts (C) down through the large routed holes in the top and bottom rails until the pre-drilled holes in both rails are aligned with the pre-drilled holes in the posts.

STEP 2.2


▶ Secure the rails to the posts with (8) ¾" Self-Tapping Stainless Steel Screws (G).

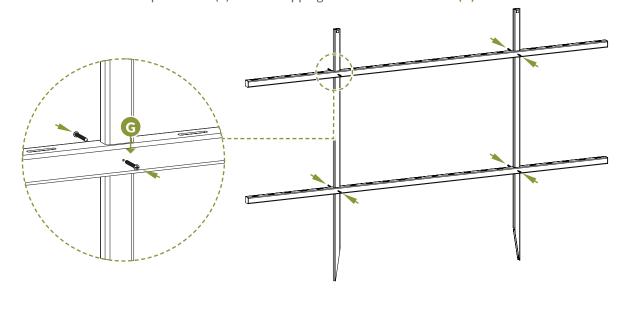


STEP 3: INSTALL PICKETS

STEP 3.1)

▶ Slide the Pickets (D) down through the top rail and into the bottom rail. The pickets are stamped 1, 2, 3, 4 and 5.

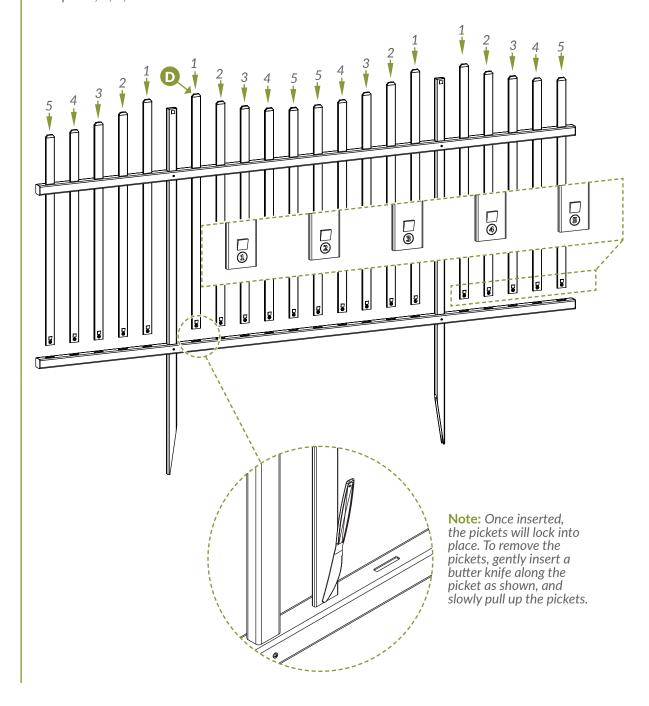

STEP 4: INSTALL FENCE INTO THE GROUND

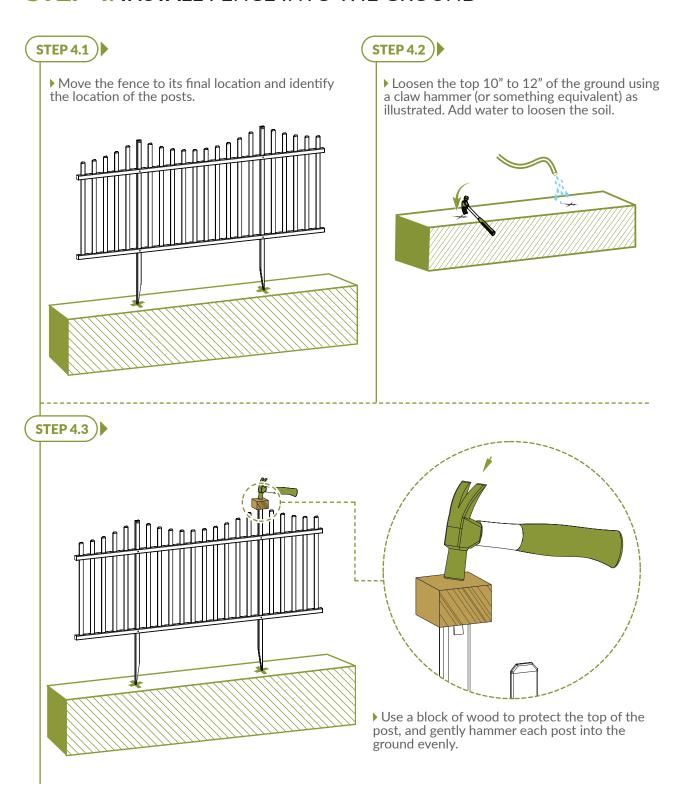


STEP 4.4

- ▶ Optional in hard ground: If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:


 1. Use a 1¾" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).

 2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes
- with water as illustrated.
- 3. Push the fence posts into the holes.

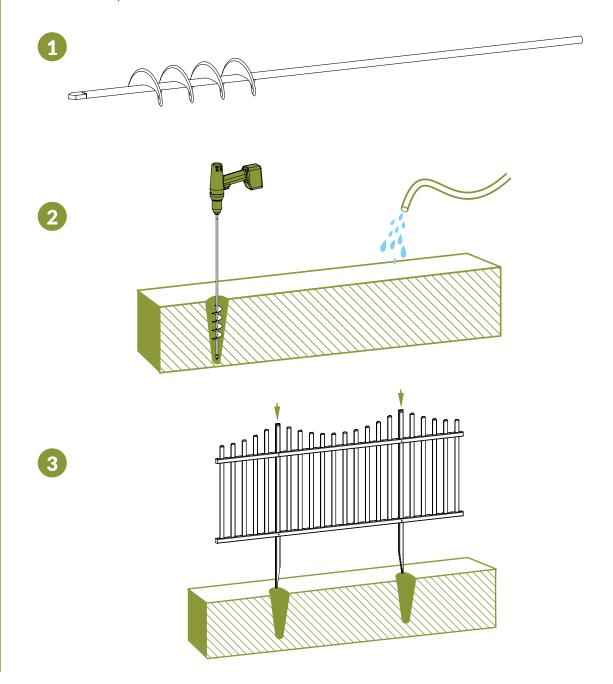


STEP 4.5)

Level the assembled unit, fill in the holes, and compact dirt around the base of each post to strengthen the unit.

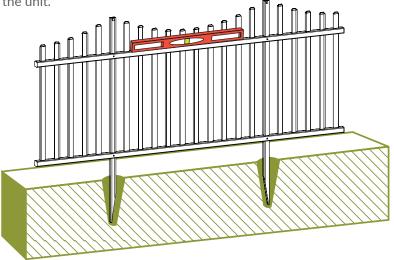

STEP 4.6

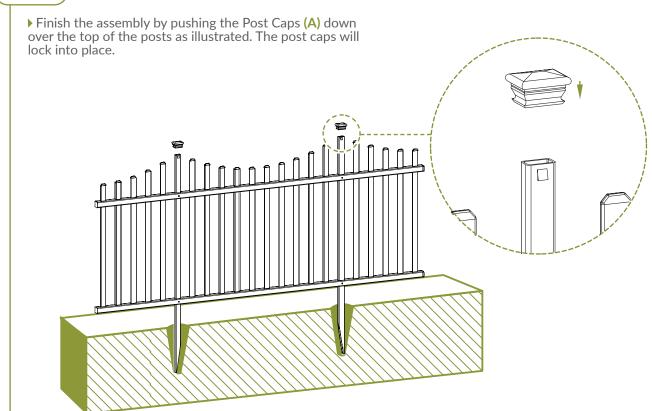

STEP 5: FASTEN JOINER CLIPS

