



ZIPPITY

Easy Does It!

NEWPORT VINYL FINISHING POST WITH NO- DIG STEEL PIPE ANCHOR KIT (36" HIGH)


ASSEMBLY INSTRUCTIONS ZP19003

10 MIN

Approximate assembly time

Want to see a video on how to
assemble this product?

Scan the QR code



GENERAL INFORMATION



IMPORTANT

- + Check the inside of the larger pieces in your box for other materials packed inside.
- + When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- + We recommend an area approximately 5'x 8' for unobstructed assembling.
- + You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@zippity-outdoor.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 8am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19003** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.

NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

AVOID THESE PITFALLS!

HAVE YOU CONTACTED YOUR **LOCAL UTILITIES**?

**1**

You must call your local utilities before you start installing your fence to avoid puncturing any unseen underground utilities, especially electrical or gas lines. Fortunately, this is made easy for you.

- + Simply call **811** in the US or visit www.call811.com.
- + In Canada, visit www.transcanada.com/contactus.html for a list of phone numbers by province.

HAVE YOU CHECKED YOUR **LOCAL ZONING LAWS**?

2

Local zoning laws and Home Owners Associations may regulate the height, style, and placement of your fence. Some locations may even require a permit.

ARE YOU ABSOLUTELY SURE WHERE YOUR **PROPERTY LINE** IS?

3

Many disputes have arisen from questions about whose side the fence is on. We recommend the outside edge of your fence to be at least 2" inside your property line to avoid any encroachment on an adjacent property.

HAVE YOU TALKED TO YOUR **NEIGHBORS**?

4

Your fence will become part of their yard too, and you'll have an easier time building it if you can have access from both sides. Besides, you may get lucky if they decide to share the cost with you.





IMPORTANT! UNSTABLE GROUND OR ROCK?

5

If you encounter rock or unstable ground, you can concrete the pipe into place either during installation or afterwards.


Detailed Product Dimensions & Specifications

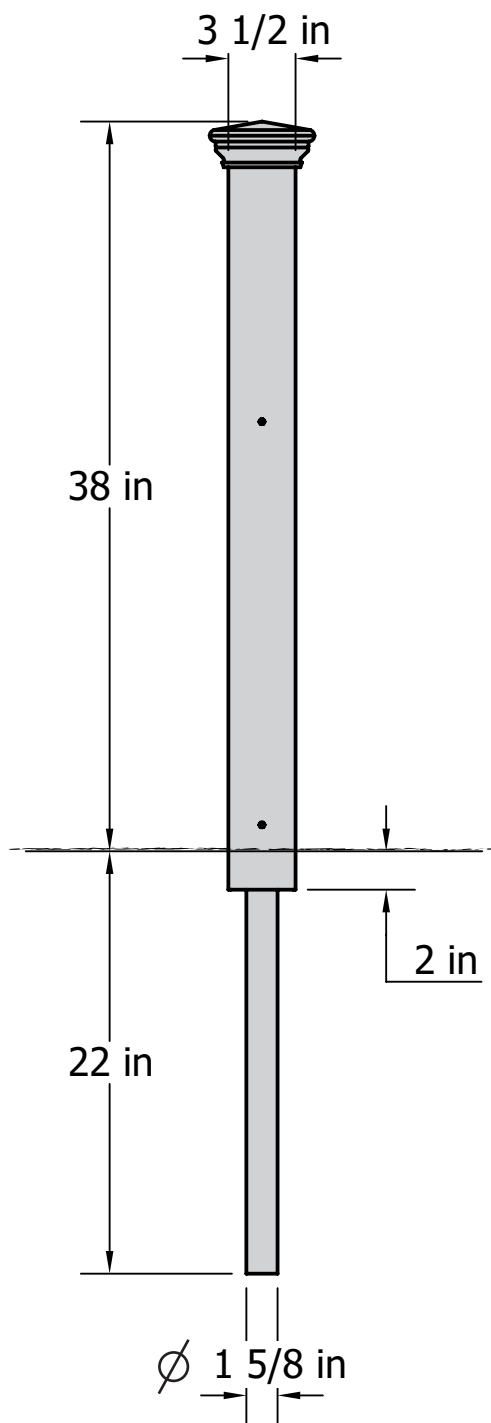

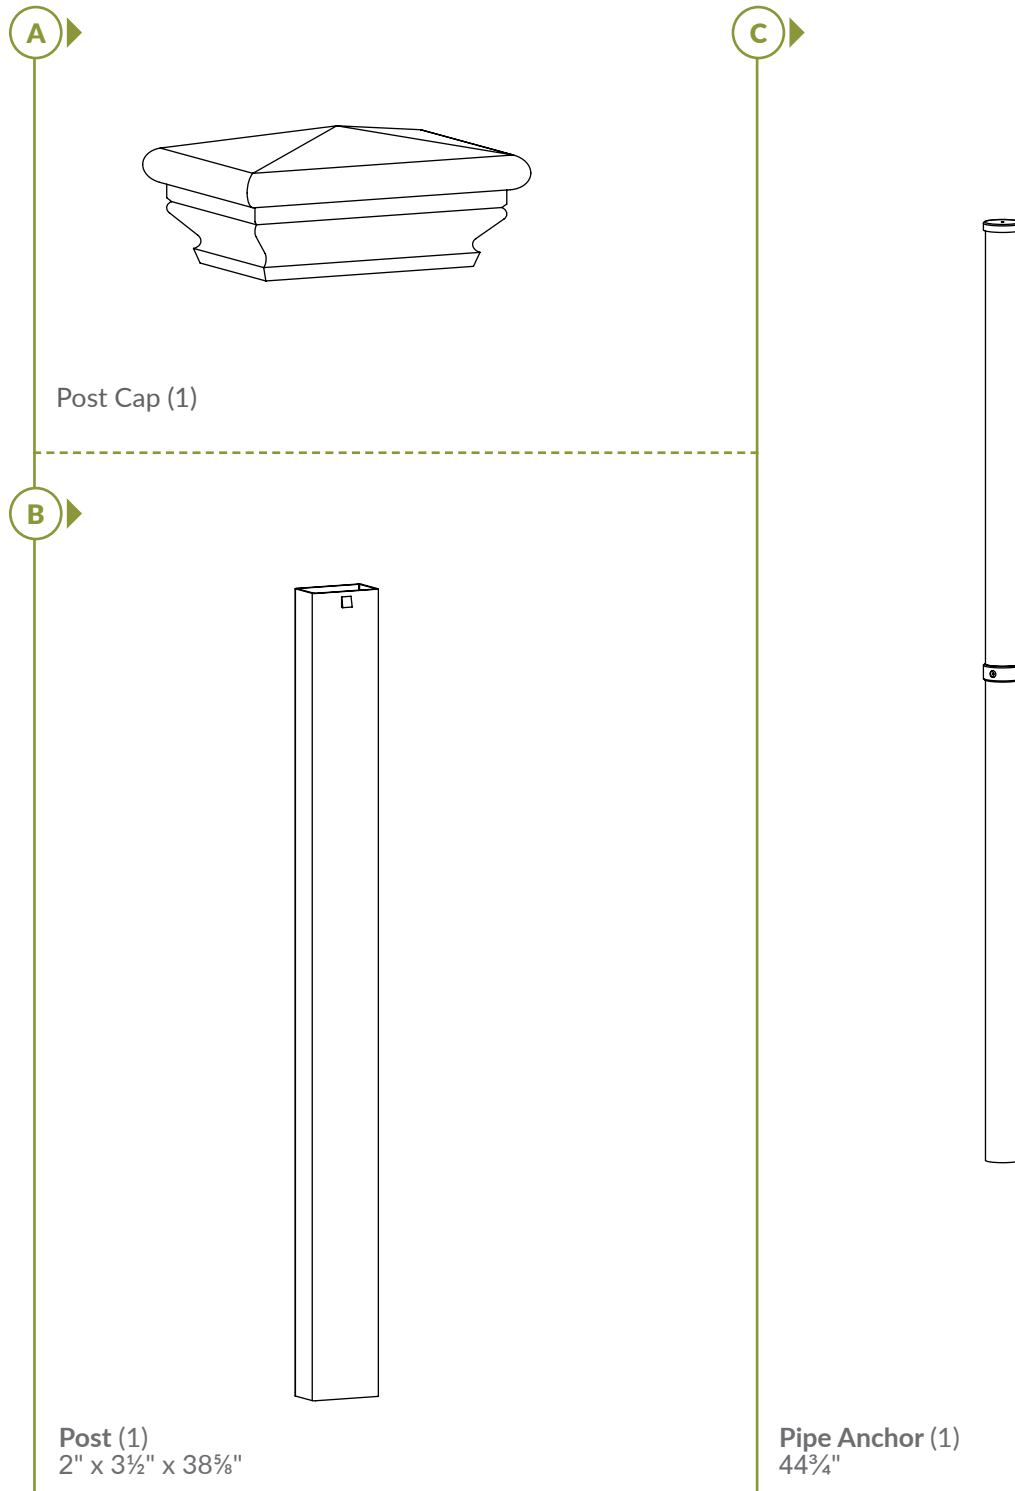STEP 1: LAY OUT MATERIALS

THIS POST IS DESIGNED TO BE USED WITH THE NEWPORT VINYL FENCE WITH POST AND NO-DIG STEEL PIPE ANCHOR KIT (36" H X 74" W) (ZP19002).

TOOL OPTIONS FOR DRIVING THE PIPE ANCHOR INTO THE GROUND:

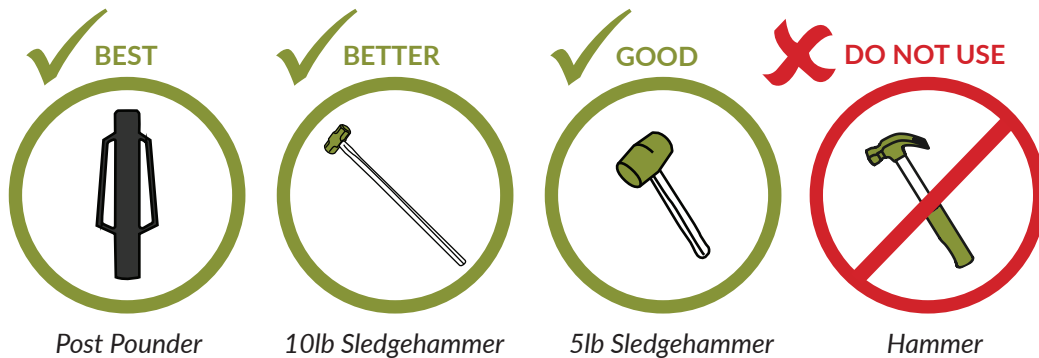


Purchase a post pounder at any hardware store, or go to www.wambamfence.com/ Post pounders cost roughly \$25 to \$30.

STEP 2: INSTALL PIPE ANCHOR

STEP 2.1 ▶


▶ Drive your Pipe Anchor (C) into the ground. The bottom of the plastic ring should sit just above the ground when finished.

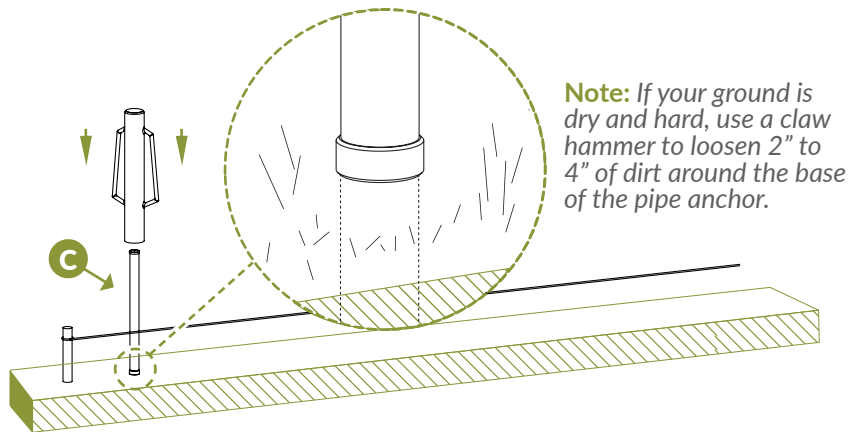

STEP 2.2 ▶

▶ Try to drive the pipe anchor as level as possible. Check that it is level every few inches. After about 18", the trajectory of the pipe is usually established and you cannot manually pull the pipe anchor back into level.


Note: Check that the pipe anchor is level in both directions.

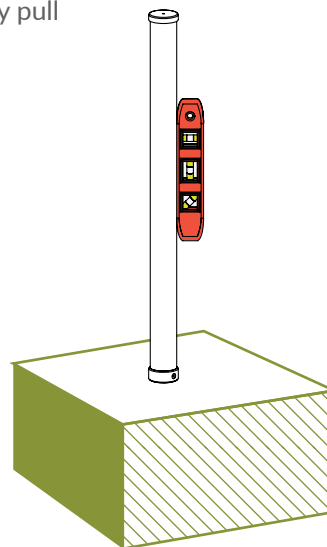

STEP 3: INSTALL POST OVER PIPE ANCHOR


STEP 3.1 ▶

▶ Orient the Post (B) with its tab at the top and slide the post over the pipe anchor down into the ground.

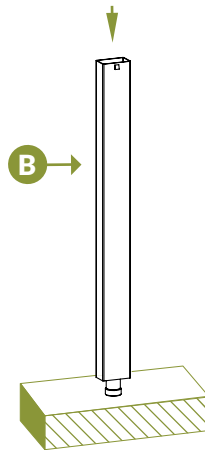


STEP 3.1 ▶

▶ Using a wood block, pound the post so that the bottom 2" to 4" is below the ground.

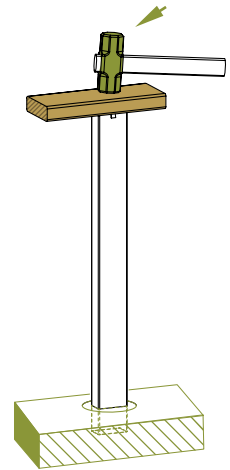

STEP 3.3 ▶


▶ **Optional:** Secure the post to the pipe anchor with (2) 1" self-drilling hex head steel screws (not included).

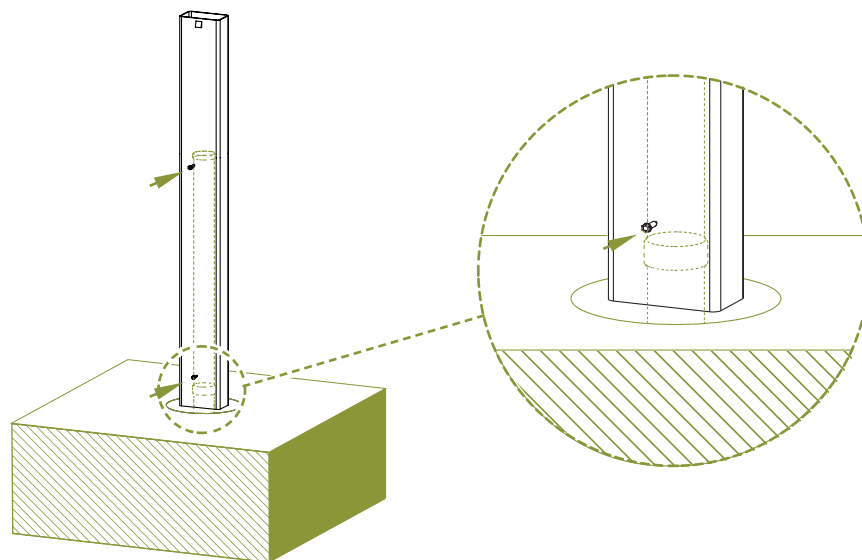


STEP 4: INSTALL POST CAP

STEP 4.1 ▶

▶ Install the Post Cap (A).
Push down on the post cap
to lock it onto the post.

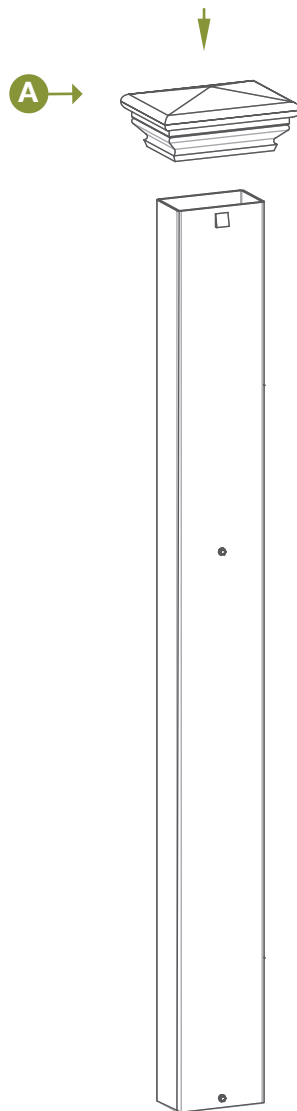

Note: The top of the post can be trimmed down as necessary. Use PVC glue (NOT INCLUDED) to permanently install the post cap as necessary.

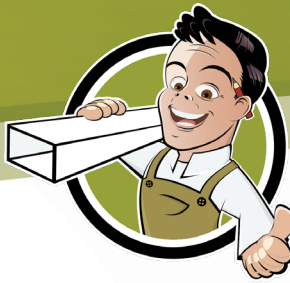

ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM